

IHSV Master computer communication connection

1、Communication cable:




USB-RS232-HL340



JMC-RS232-ISV



Schematic diagram of wire production:

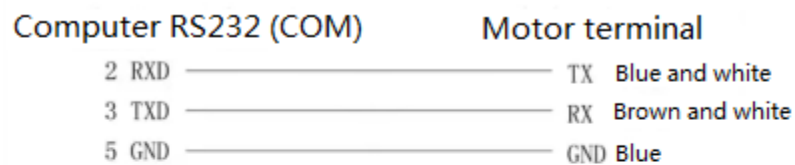

9-pin female head

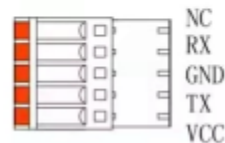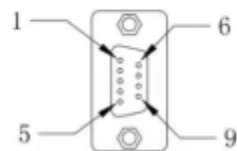

V6 Version ISV cable
connect by the correct direction



V5 version ISV cable connect
by the correct direction in the middle

2、Communication driver installation

Refer to  公司配备的USB转RS232

3、Master computer communication connection


V5 version use this software  JMC IHSV(V5) & MCAC806 2016-04-30.exe

Attention: This software needs to be running as an Administrator!!! COM numbers are only valid from 1-8, others are invalid

V6 version use this software  JmcServoPcControl.exe



V5 Version software schematic:

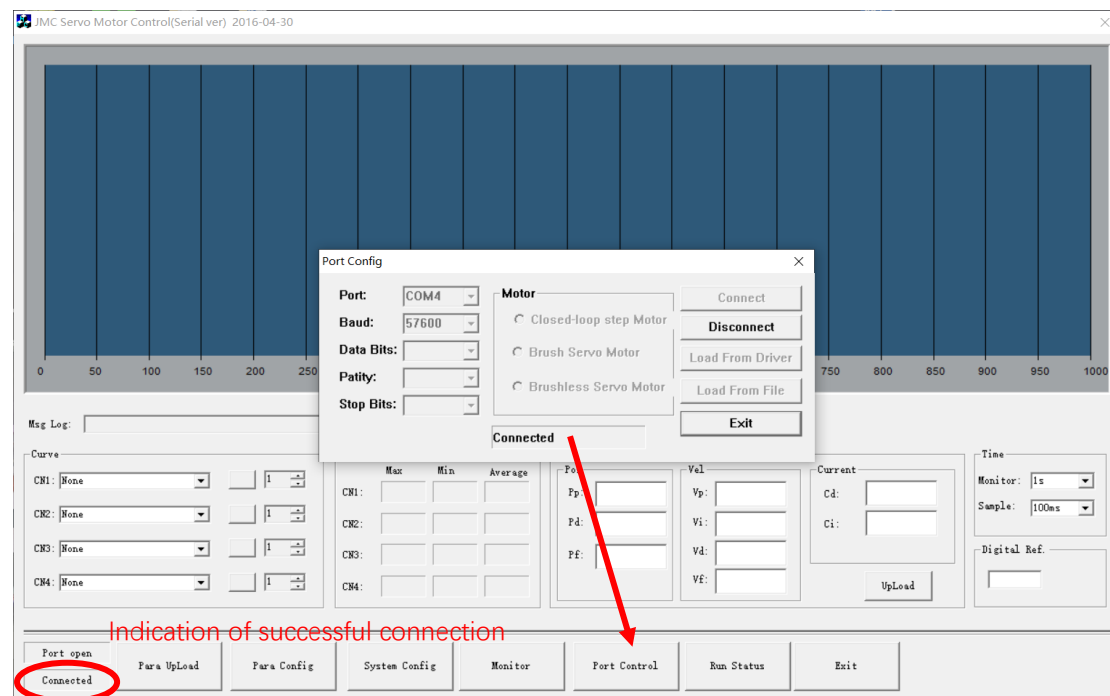

V6 Version software schematic :

